NEC DSX Telephone Training

Over View:

Telephone Buttons, Speed Dial, Call Forwarding, Conference Calls, Voice Mail, Setting Date & Time

NEC DSX

Storing Speed Dial Numbers To store a Speed Dial number at a keyset:

Menu + **71** (for Personal)

Enter the Speed Dial location. **01-20 Select** the displayed Speed Dial location.

>> Scroll forward through the Speed Dial type choices till you get to **Group** Select the displayed **90** by pressing **Next** Now dial the 10 digit telephone number. Then press **Next** -> to enter Speed Dial name. <u>See Sheet</u>. After entering the name via the handout press **Save** to save the speed dial. Press the **Speaker** to exit programming. Speed dials 01-10 now correspond to the 10 buttons above the line appearances. Label accordingly and use.

Call Forwarding Off Premises To set up Call Forwarding Off Premises at a keyset:

Menu + 60 Call Forwarding sub-menus

Select to enter the Call Forwarding setup mode.

Edit to set up your Call Forwarding options. Select the Call Forwarding Type and enter the options.

Off Premise Speed Dial

Reroute your calls off premise using a number stored in your Personal Speed Dial.

- **1.** Push **Select** then **<<** or **>>** to choose the Personal Speed Dial number.
- 2. Push Next.
- 3. Push All to forward all calls, or Line to forward just outside calls.
- **4.** Push **Save** to save your setup or **Cancel** to quit without saving.

Conference Using Conference To set up a Conference:

- 1. Establish an Intercom or outside call.
- 2. Press CONF.
- a) Your hear Intercom dial tone.
- b) Your caller hears Music on Hold (if installed) while they wait for you to set up the Conference.
- **3.** Do one of the following:
- a) Dial extension you want to add.
- b) Place or answer an outside call.
- c) Retrieve a call from Park Orbit.
- **4.** Press **CONF** to set up the Conference.
- a) If you cannot add additional parties to your Conference, you have exceeded the system's Conference limit.
- 5. Repeat steps 2-4 to add additional parties to your Conference. You can also do one of the following.
- a) To optionally place a Conference on Hold, press HOLD.
- b) To reinstate the Conference on Hold, press CONF
- 6. To exit the Conference, hang up.
- a) The remaining parties can continue their conversation uninterrupted.
- b) If you were in Conference with two outside lines, this may set up a Tandem Calls / Unsupervised Conference.

NEC DSX

Voice Mail

Using the Basic Voice Mail Features

To log into your mailbox from your own phone, do one of the following:

- 1. Press V-MAIL.
- 2. Push V-Mail xx (VM:xx).
- a) The xx is the number of new messages in your mailbox.

To log into your mailbox from a co-worker's phone:

- 1. Press INTERCOM and dial 700.
- a) 700 is the voice mail "master number."
- 2. Dial *your own* extension number.

From outside, to log onto your mailbox:

- 1. After calling your company's Automated Attendant, (main number) dial # (for remote logon).
- 2. Dial your own extension number.

To log onto your mailbox while listening to your own greeting:

- 1. Wait for your greeting to start.
- 2. Dial # to stop the greeting.
- 3. Dial # and your own extension number, and then follow the voice prompts.

From outside, to go right into your co-worker's mailbox:

- 1. After calling your company's Automated Attendant, dial * (for quick message).
- 2. Dial your co-worker's extension number.

To Transfer your call to a co-worker's mailbox:

- 1. Do not hang up.
- 2. Press TRANSFER.
- 3. Press V-MAIL.
- **4.** Dial your co-worker's extension number.
- a) To check if your co-worker is at their desk before sending the call to their mailbox, dial their extension number *before* pressing **V-MAIL**.
- 5. Hang up.

NEC DSX

Voice Mail Basic Setup of Voice Mail Box

To log into your mailbox from your own phone, do one of the following:

- 1. Press V-MAIL.
- 2. Dial 0 (Main Menu of Features)
- 3. Listen to your messages Dial 5
- **4.** Record your Greeting Dial 4
- 5. Record your Name Dial 76

Mail Box Options Dial 67

- 1. To change your security code Dial 7
- 2. To Set Notifications Dial 6
- 3. To Turn (On/Off) Auto time stamp Dial 28

Administer Main Greeting

At Extension 301 (Reception)

Log into your mailbox from your own phone, do one of the following:

- 1. Press V-MAIL.
- 2. Dial 0 (Main Menu of Features)
- **3.** Dial 72(System administrator functions)
- **4.** Dial 4 (Instructions Menu Messages)

Enter Mail Box Number 801

- 1. Dial 5 to Listen to Main Greeting before recording.
- 2. Dial 7 to Record Main Greeting
- 3. Dial 3 to Erase Main Greeting

Setting the System Time & Date

To set the time for your DSX Version 3 System:

- 1. Go to extension 301.
- 2. <u>Keyset</u>: Push Menu + 01. Enter the time (HH:MM:SS, 24-hour clock).
- 3. Push Save.

To set the date for your DSX Version 3 System:

- 1. Go to extension 301.
- 2. <u>Keyset</u>: Push **Menu** + **02**. Enter the date (DD/MM/YYYY).
- 3. Push Save.